

eSmartCam USER MANUAL

1 Download App

Download App 'eSmartCam' from 'App Store' or 'Google Play' or scan the QR code as attached (Fig. 1):



Fig. 1

2 Register account and login (Fig. 2 & 3).



Fig. 2



Fig. 3

3 Reset

If the camera was used with other account, please reset it. Reset button is at the bottom OR rear of camera. Insert reset pin and press it for 3 seconds. After hearing continuous buzzing 'be-be', it will run automatically and have a sound 'dong-dong' which means reset successfully (Fig. 4).

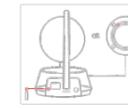


Fig. 4

NOTE: Please reset it when the camera is power-on.

4 Login and link configuration

For the first time you log in or reset, the App will remind you to add camera. The camera will sound short 'be-be' alarming which means you can start connection. We have three ways for connection: smart link, QR code configure, LAN configure. (Fig. 5 & 6)



Fig. 5

Fig. 6

NOTE: Please make sure use 2.4G Wi-Fi for connection.

4.1 Smart Link

Input Wi-Fi name & password. After 'ding-dong' and continuous buzzing 'be-be', it means successful connection.(Fig. 7 - 12)

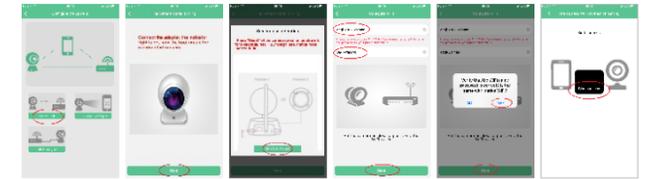


Fig. 7

Fig. 8

Fig. 9

Fig. 10

Fig. 11

Fig. 12

4.2 QR code configure

Choose QR code configure and input Wi-Fi name & password. A QR code will be created and shown on screen. Put your smart phone 20-30cm near to camera and scan QR code by lens. After 'ding-dong' and continuous buzzing 'be-be', it means successful connection. (Fig. 13 - 20)



Fig. 13

Fig. 14

Fig. 15

Fig. 16

Fig. 17

Fig. 18



Fig. 19

Fig. 20

4.3 LAN configure

Connect camera with LAN cable under the same network as smart phone. After camera ringing 'Ding-ling', choose it from the list (Fig. 24) and confirm to connect it (Fig. 25).(Fig. 21 - 25)

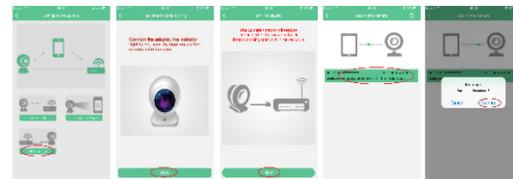


Fig. 21


Fig. 22

Fig. 23

Fig. 24

Fig. 25

5 The instructions of icons on App

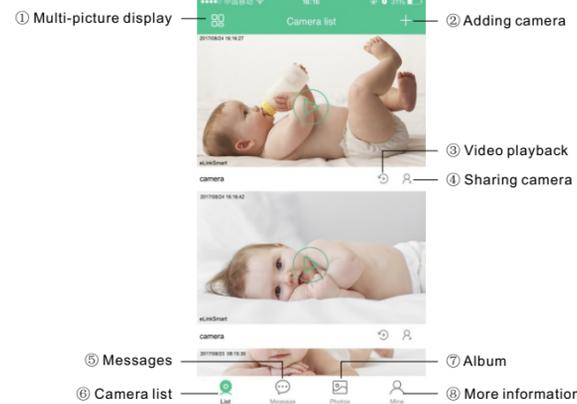

- ① Click it to view multiple cameras (support max 4 cameras in one screen).
- ② Click it to add/connect more camera(s).
- ③ Click it to check video playback in TF card.
- ④ Share the camera to other user account(s). If you don't want to share, select the account and slide left to delete it.
- ⑤ Pushing pictures from motion/cry detection and sub-account access records is here.
- ⑥ Click it back to camera list.
- ⑦ Snapshot and video clip is here.
- ⑧ Click it for more information such as version number, user video instruction etc.

* The pictures are only for reference. There may be slight differences for different cameras. Please refer to the actual App interface.

Warranty Card

Product Model No.		Purchase Date	
Product Name		Invoice No.	
Factory Serial No.		Customer Name	
Purchase Store		Customer Phone	

Warranty Policy

Thanks for using our product. To obtain better service, please read the following clauses and keep this warranty card properly.

Warranty

1. We provide ___ months limited warranty.
2. We do not replace or refund any sold products except for quality problem.

Disclaimers

- This warranty does not cover the following cases:
1. Man-made surface corruption, break, distortion, or damages due to improper installation, and maintenance.
 2. Connecting port is distorted or cracked; PCB is distorted, cracked, damaged or burned; chip is severely burned.
 3. The warranty period has expired.
 4. Products repaired by unauthorized service provider or personnel, or disassembled by users.



Made in China

